

Infinity ICO-788DH head assembly replacement instructions



Step 1 – Remove the caps on both sides with a Phillips screwdriver.



Step 2 – Lift up the lid to a vertical position. Pull out the spring and top cover with a pair of needle nose pliers.



Step 3 – Push out the centre shaft using your screwdriver.



Step 4 – Pull up to remove the old lid and put on the new one.



Step 5 – Insert the centre shaft back into the slot.



Step 6 – Insert the spring and cover back into the slot.



Step 7 – Reattach the caps on both sides.



That's it! Your done 😊