

USA / CANADA

Panasonic®

Thank you for purchasing this
Panasonic product.

感謝您購買 Panasonic 的產品。

본 Panasonic 제품을 구입하여 주셔서 감사합니다.

Merci d'avoir acheté cet appareil Panasonic.

Gracias por comprar este producto Panasonic.

Operating Instructions
Automatic Rice Cooker / Steamer

Household Use only

使用説明書

自動電飯鍋 僅供家用

사용설명서

자동 밥솥/찜기 가정용으로만 사용 가능

Manuel d'utilisation
Cuisineur de riz/à vapeur automatique

Usage domestique uniquement

Instrucciones de funcionamiento
Olla arrocera automática / Olla a vapor

Uso doméstico únicamente

ENGLISH

한국어

한국어

FRANÇAIS

ESPAÑOL

Model No. / 型號 / 모델 번호 / N° de modèle / Modelo No. : SR-G06FGE

CONTENTS

Important Safeguards.....	2
Cautions.....	3-4
Parts identification.....	5
How to cook.....	6
How to steam food.....	7
How to clean.....	8
Troubleshooting.....	9
Specifications.....	9
Warranty Card USA.....	42
Warranty Card CANADA.....	43
Before operating this product, please read these instructions completely.	

 
目录

重要安全注意事项.....	10
注意事项.....	11-12
零件确认.....	13
煮的方法.....	14
蒸的方法.....	15
如何清理.....	16
问题处理.....	17
规格.....	17
在开始使用此锅前, 请详细阅读各项 指示。	

목차

중요한 안전 대책.....	18
경고.....	19-20
부분 설명.....	21
취사 방법.....	22
음식을 찌는 방법.....	23
닦는 방법.....	24
고장 수리.....	25
제품 사양.....	25

본 제품을 사용하기 전에,
다음의 설명을 모두
읽어보시기 바랍니다.

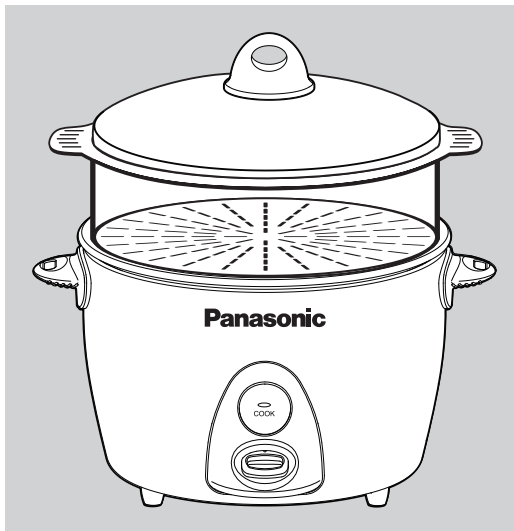

SOMMAIRE

Mises en garde importantes.....	26
Précautions.....	27-28
Identification des pièces.....	29
Comment effectuer la cuisson.....	30
Comment cuire les aliments à la vapeur.....	31
Comment nettoyer.....	32
Guide de dépannage.....	33
Spécifications.....	33
Garantie pour le CANADA.....	Endos

Prière de lire entièrement ces
instructions avant de faire
fonctionner l'appareil.

CONTENIDO

Medidas de seguridad importantes.....	34
Precauciones.....	35-36
Identificación de partes.....	37
Cómo cocer.....	38
Cómo vaporizar los alimentos.....	39
Cómo limpiar.....	40
Resolución de problemas.....	41
Especificaciones.....	41

Antes de operar esta unidad, por
favor lea estas instrucciones
completamente.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plug and Rice Cooker, except lid and pan in water or other liquids.
4. Close supervision is necessary when any appliance is used near or by children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.

14. SAVE THESE INSTRUCTIONS

This product is intended for household use only.


NOTE

- A. A short power supply cord (or cord set) is provided to reduce the hazards resulting from becoming entangled or tripping over a longer cord.
- B. Longer cord set or extension cords are available and may be used if care is exercised in their use.
- C. If a long cord set or extension cord is used,
 - (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - (2) if the appliance is of the grounded type, the extension cord should be a grounding type three wire cord and
 - (3) the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled by children or tripped over accidentally.

This appliance has a polarized plug: (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Cautions : To prevent the risk of fire, electric shock, or personal injury, observe the following instructions.


Before use, remove the paper located between the cast heater and the pan. Be sure to keep the rice cooker out of the reach of children especially when cooking rice.

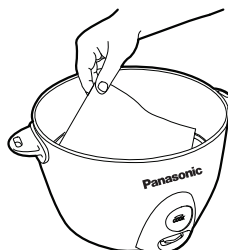


Always keep the outside bottom of the pan and the cast heater clean and dry. Any foreign matter found should be removed immediately.



Avoid exposing the rice cooker to water or placing the rice cooker near water supply. The rice cooker should not be covered with a cloth or any other objects while in use.

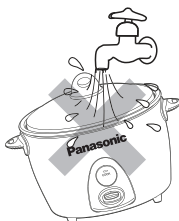


The rice cooker should not be placed on uneven surface. Do not place the pan directly on an open flame.

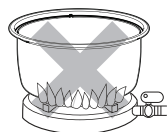

Cautions : To prevent the risk of fire, electric shock, or personal injury, observe the following instructions.

If the indicator light does not turn on while pressing the switch, do not place or insert any objects or utensils on the switch, as it may cause the rice cooker to malfunction. The problem should be corrected by an authorized factory service center. Be careful of the steam when the rice cooker is being used.

other object

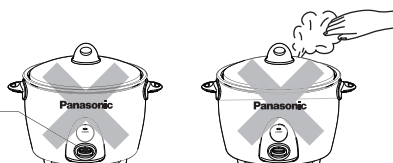

Do not damage the power cord and do not attempt to repair it if it is damaged. Consult your nearest authorized service facility for repair or replacement of the power cord or power plug. Ensure that the power plug fits properly into the wall outlet and that is properly inserted.




Prevent insects from getting into the rice cooker as they may cause the rice cooker to malfunction.

Do not substitute the pan with other containers, as it will cause the rice cooker to malfunction. Only the pan included with the rice cooker should be used.

Do not apply force onto the center of the pan as there is the possibility of damage to the pan.



Parts identification

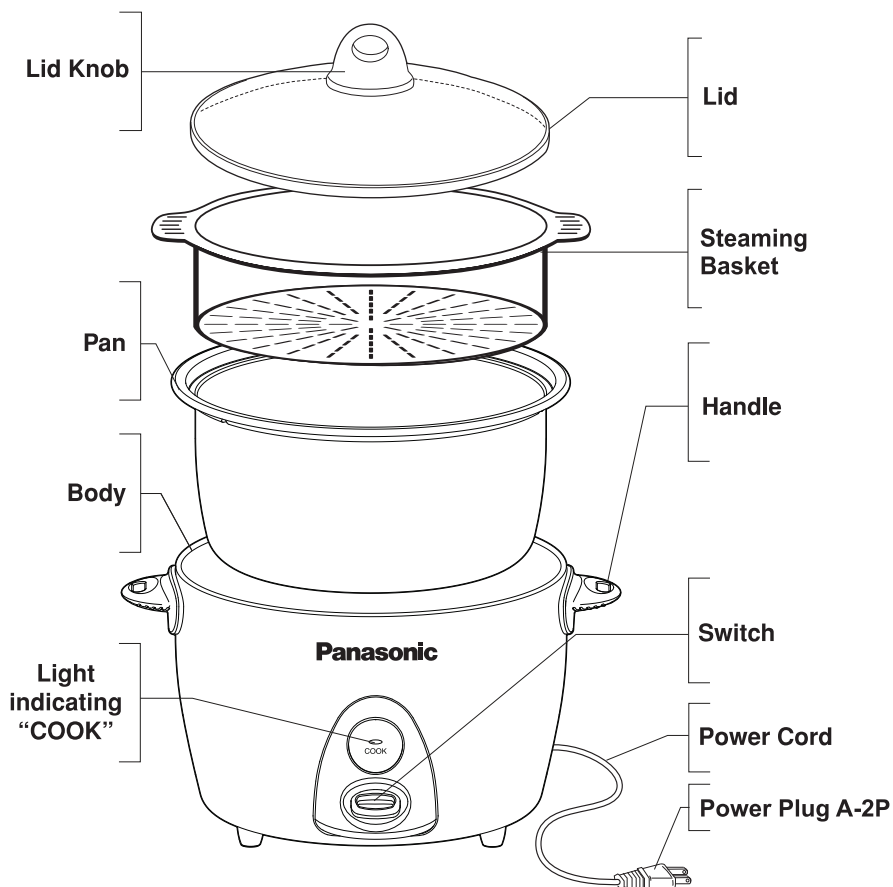

CAUTION - To prevent fire or electric shock, discontinue use immediately if the power cord is damaged. Take appliance to a service center for cord replacement.

Accessories



Measuring Cup
(Approximately 180 mL)




Scoop




Steaming Basket

How to cook

- 1 Measure rice with the measuring cup provided.**
Then rinse rice thoroughly using a different container.

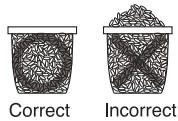


- 2 Put the rinsed rice in the pan and add water according to the scales shown in the table below.**

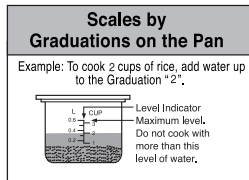

- Adjust the quantity of water to your personal taste.
- Soak rice in water at least 30 minutes for better rice cooking.

- 3 Place the pan into the body.**
Make sure the pan is directly in contact with the cast heater by turning it slightly from right to left until it settles properly.

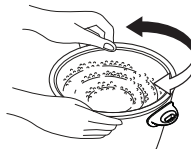


- **Wipe the surface of the pan before use.** If it is wet, it may cause noise while cooking. Any foreign matter between the pan and cast heater may damage the unit.

- 4 Firmly close the lid.**




- If lid is not securely closed, cooking will be affected.
- Do not open the lid when in use.

- 5 Plug in and press the switch.**
The light indicating "COOK" will be on.
Cooking will start immediately.

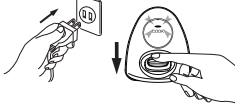

- Do not plug in the unit until you are ready to cook. Otherwise, rice may be ruined.
- If the pan is not in the unit, cooking will not begin.
- After the switch pops up, leave the lid closed for at least 15 minutes to steam rice. Then mix the rice well by using the scoop to allow water vapor to escape.

- 6 Unplug the unit when finished.**

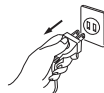

How to steam food

1

Add water into the pan and place the steaming basket on the pan. Slightly turn or adjust the steaming basket to the left and right until it fits onto the ribs at the edge of the pan.

The diagram shows a top-down view of the steaming basket being placed onto the pan. Two curved arrows indicate the basket should be rotated to fit onto the ribs. A label 'Rib' points to the central support, and 'Water' points to the liquid in the pan.

■ If cooking rice at the same time, DO NOT cook beyond following capacity.

	Rice (cups)
0.6 L	1

2

Place the pan into the body and add foods (place in dish if required).

The diagram shows a hand placing the pan into the Panasonic steaming unit. The unit has a control knob and a power cord.

■ Wipe the surface of the pan before use. If it is wet, it may cause noise while steaming. Any foreign matter between the pan and cast heater may damage the unit.

3

Close the lid firmly .

The diagram shows the Panasonic steaming unit with its lid closed. The unit has a control knob and a power cord.

■ If the lid is not securely closed, steaming will be affected.
■ Do not open the lid when in use.

4

Plug in and press the switch. The light indicating “ COOK ” will be on. The steaming will start immediately.

The diagram shows a hand plugging the power cord into a wall outlet. Another hand is shown pressing a button on the Panasonic steaming unit. The unit has a control knob and a power cord.

■ Do not plug in until you are ready to steam.
■ If the pan is not in the unit, steaming will not begin.

5

Time the steaming manually and unplug.

The diagram shows a hand unplugging the power cord from a wall outlet. The unit has a control knob and a power cord.

■ When the food is cooked, the steaming can be canceled by unplugging the unit.
■ The unit will automatically switch off when water in the pan has completely evaporated.

6

Remove foods, then the steaming basket and finally pour out remaining water.

The diagram shows the Panasonic steaming unit with its lid open. The pan is being removed from the unit. The unit has a control knob and a power cord.

■ Be careful of the hot water in the pan.

How to clean

Caution : Make sure the rice cooker is sufficiently cooled down before cleaning.


Unplug before cleaning. Check if there is any dirt sticking on the power plug and power cord. The dirt should be removed immediately. Do not use benzine or thinner in wiping and cleaning the rice cooker.

Lid / Pan

Soak the lid and pan with warm water and wash with a sponge. Do not use scrubbers in cleaning.

Body

Wipe with a damp cloth. Do not immerse the body in water.

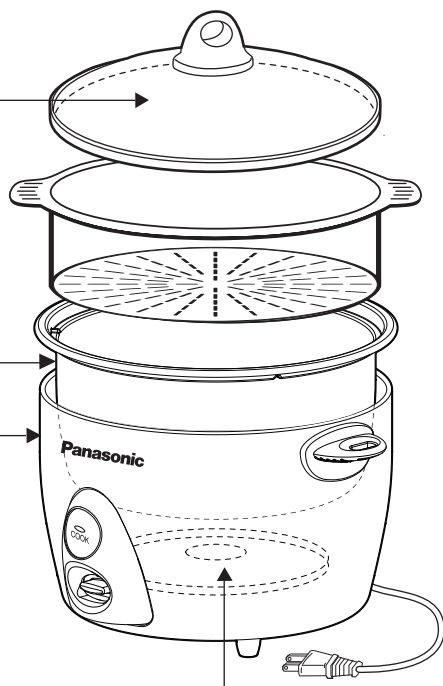

Cast Heater

If an object has stuck on the cast heater, lightly polish it off using fine sandpaper (of about # 600) / steel wool. Then wipe with a damp cloth.

Accessories



Measuring Cup



Scoop



Steaming Basket

Always wash with dishwashing liquid and sponge after use.

Troubleshooting

■ Case of equipment failure? Check according to the following item :

Problems Description		Cooking Problems						No power	Emits strange sounds
Possible Cause	Rice too hard	Rice is half-cooked	Rice too soft	Viscous liquid overflows	Bottom is scorched				
Rice to water ratio not correct	●	●	●	●	●	Unplug the rice cooker from the wall socket. Check circuit breaker. If circuit breaker is ok then take the rice cooker to the nearest authorized service center.	Popping sounds are caused when water trapped between the pan and the cast heater evaporates. This can cause damage to the pan and cast heater.		
Rice not rinsed well enough				●	●				
Pan bottom dented or uneven	●	●			●				
Foreign matters between pan and cast heater	●	●	●		●				
Rice cooked with oil	●	●			●				
Rice not fluffed (mixed) after cooking	●		●		●				
Lid is not securely closed				●					
Pan was not clean or odors from previous cooking remain in pan					●				
Power cord was unplugged or the switch was turned off during cooking		●							

Specifications

Model	SR-G06FGE
Power Supply	120 V ~ 60 Hz
Power Consumption	310 W
Capacity	0.18 - 0.6 L
Net weight (approx.)	1.3 kg

PANASONIC PRODUCT – LIMITED WARRANTY

EXCHANGE PROGRAM

Panasonic Canada Inc. warrants this product to be free from defects in material and workmanship under normal use and for a period as stated below from the date of original purchase agrees to, at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by Panasonic Canada Inc.

Electric Rice Cooker	One (1) year
Hot Water Dispenser	One (1) year
Automatic Bread Maker	One (1) year
Multi Cooker	One (1) year
Toaster Oven	One (1) year
Breakfast series (Coffee maker, Toaster, Kettle)	One (1) year
Hand Blender	One (1) year

This warranty is given only to the original purchaser, or the person for whom it was purchased as a gift, of a Panasonic brand product mentioned above sold by an authorized Panasonic dealer in Canada and purchased and used in Canada, which product was not sold "as is", and which product was delivered to you in new condition in the original packaging.

IN ORDER TO BE ELIGIBLE TO RECEIVE WARRANTY SERVICE HEREUNDER, A PURCHASE RECEIPT OR OTHER PROOF OF DATE OF ORIGINAL PURCHASE, SHOWING AMOUNT PAID AND PLACE OF PURCHASE IS REQUIRED

LIMITATIONS AND EXCLUSIONS

This warranty **ONLY COVERS** failures due to defects in materials or workmanship, and **DOES NOT COVER** normal wear and tear or cosmetic damage. The warranty **ALSO DOES NOT COVER** damages which occurred in shipment, or failures which are caused by products not supplied by Panasonic Canada Inc., or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a Authorized Servicer, or damage that is attributable to acts of God.

THIS EXPRESS, LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL PANASONIC CANADA INC. BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY. (As examples, this warranty excludes damages for lost time, travel to and from the Authorized Servicer, loss of or damage to media or images, data or other memory or recorded content. This list of items is not exhaustive, but for illustration only.)

In certain instances, some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or the exclusion of implied warranties, so the above limitations and exclusions may not be applicable. This warranty gives you specific legal rights and you may have other rights which vary depending on your province or territory.

CONTACT INFORMATION

For product information and operation assistance, please visit our Support page:
www.panasonic.ca/english/support

For defective product exchange within the warranty period, please contact the original dealer.