


Stew Cooker


Instruction Manual

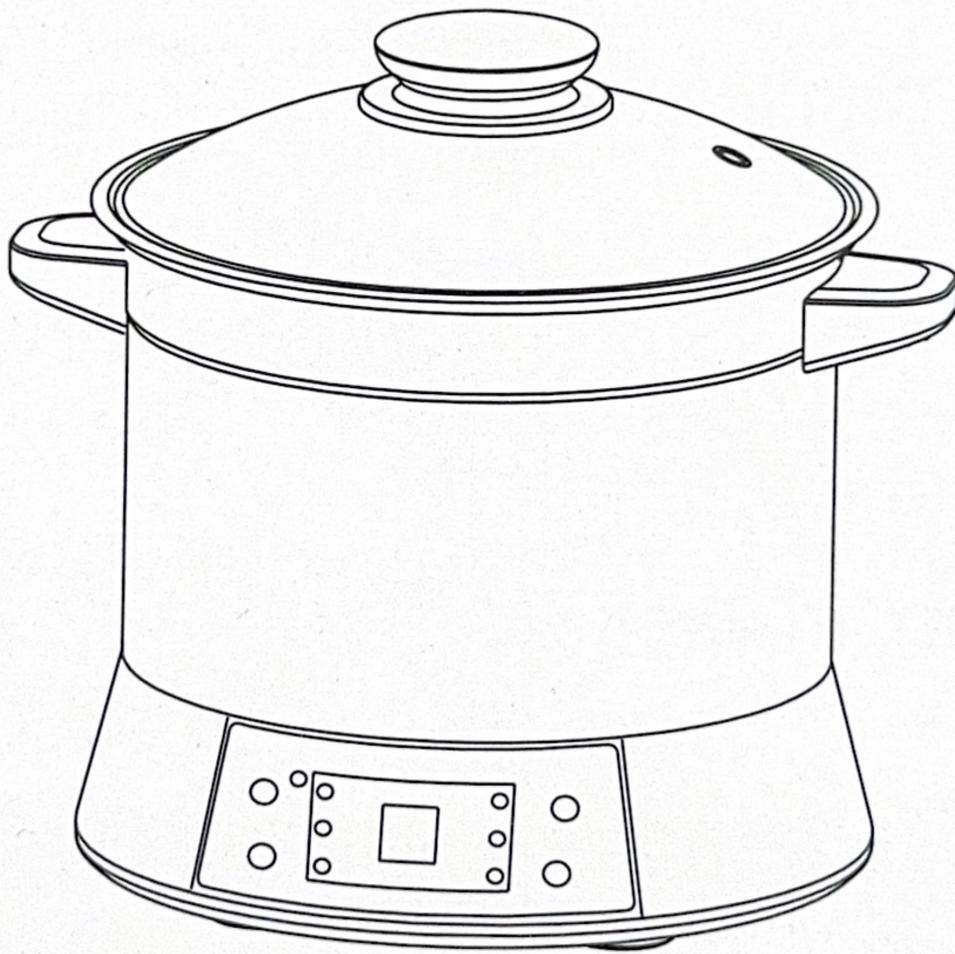

MODEL:WDZ-12G

Please read Instruction Manual cardfully before using

Product Diagram:

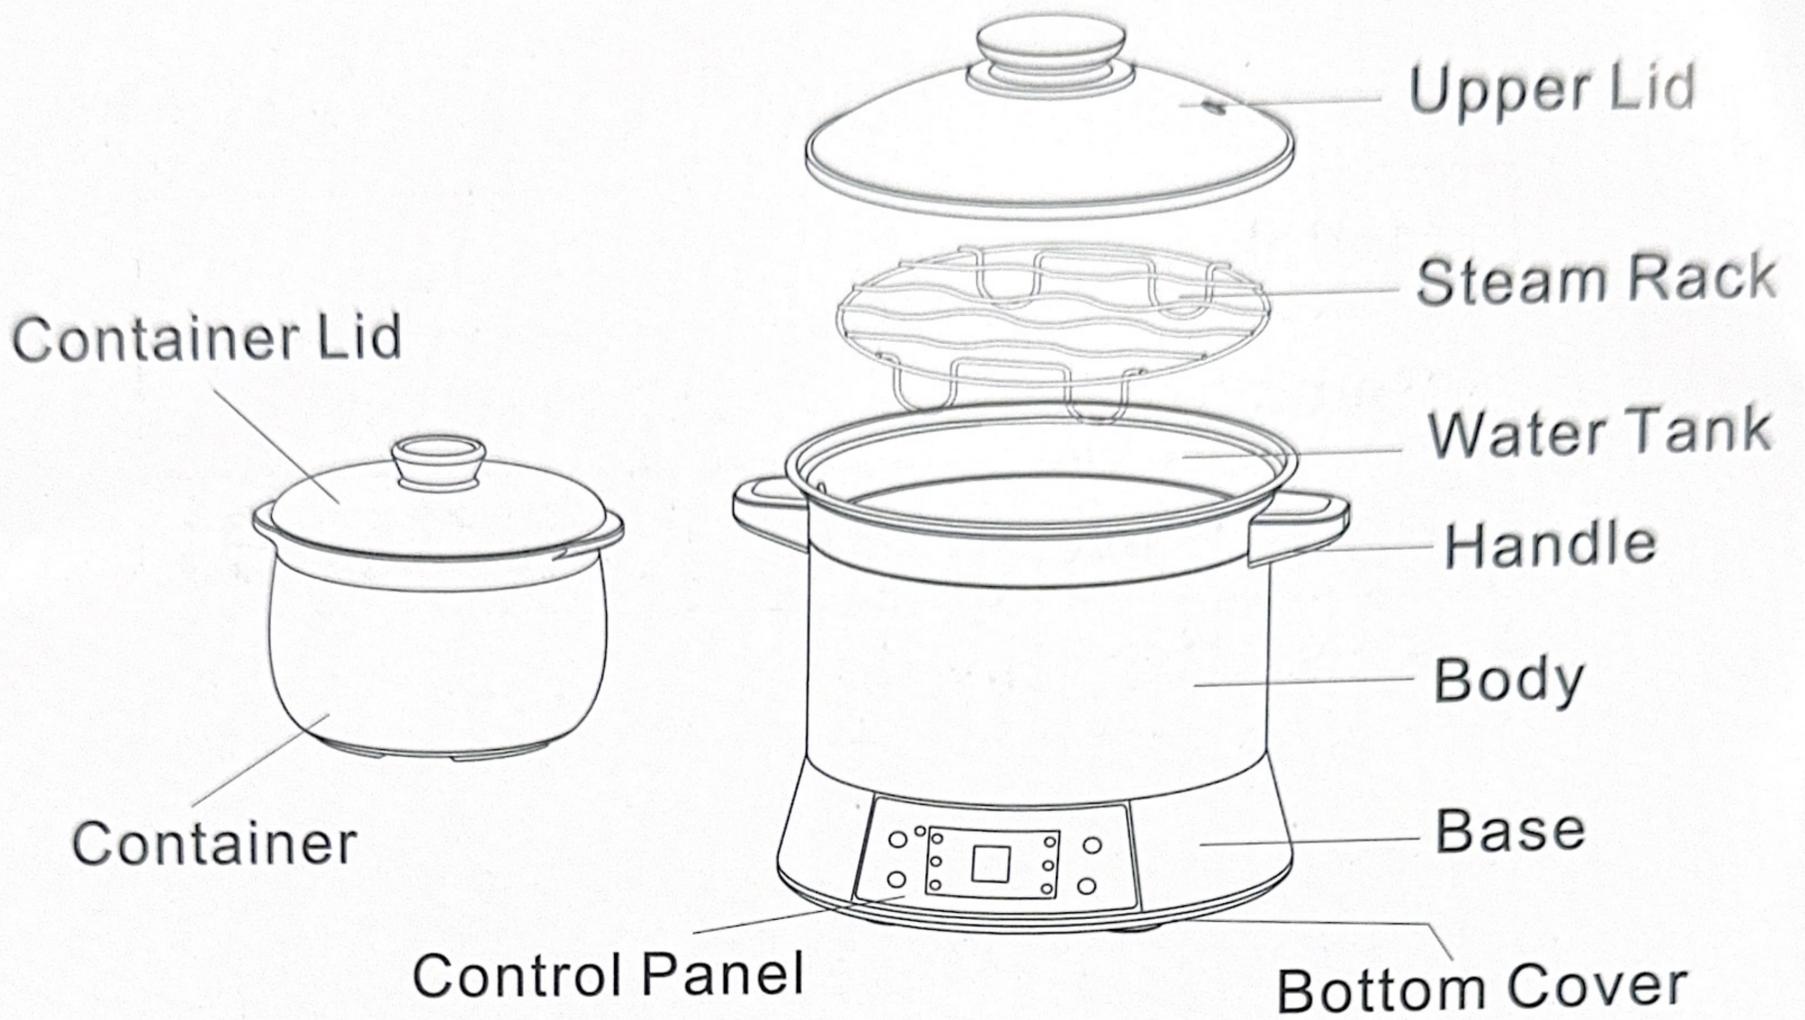

Operating panel sample:




Product Standard Parameters:

Model	WDZ-12G
Rated Voltage	120V~60Hz
Rated Power	300W
Rated Capacity	1.2L


Usage:

1. Stew

1.1 Put food and add enough water into containers (enough water to immerse all food is better). Cover the container lids.

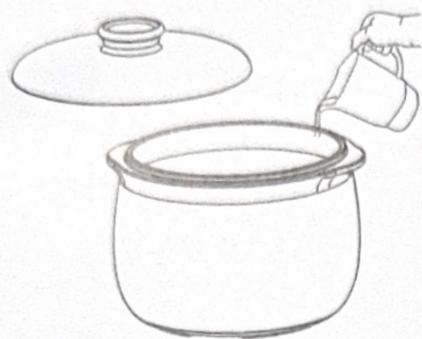

1.2 Put steam rack in to water tank, feet down forward. Add water into water tank, no higher than mark in wall. Put container onto the rack and cover upper lid.

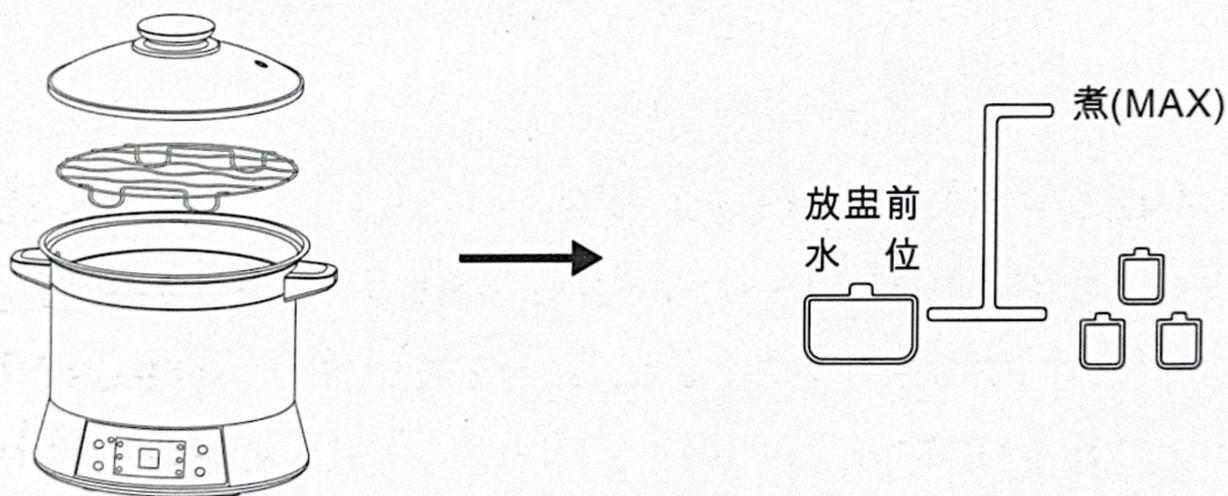

2. Steam

Put steam rack in to water tank, feet down forward. Add water into water tank, no higher than mark in wall. Put plate of food onto the rack and cover the upper lid.

3. Choose the function

- 3.1 Once power on, no function light turns on. Time shows 0:00
- 3.2 Press "Function/ Cancel" button, the chosen function twinkles accordingly. Display shows the default time. Press "Time+", "Time-" to adjust the time you need. The appliance starts to work in 10 seconds when finish pressing.
- 3.3 The appliance alarms "didi..." for 1 minute when finish working. Then shift to "keep warm" state. Display shows "EE"
- 3.4 If dry boiling at the "keep warm" state, the appliance alarms "didi..." for 40 seconds. The appliance turns off. All function lights go off and display shows "EO"
- 3.5 When cool down, appliance is standby and display shows "OF"

4. Preset

Press "Preset" button then press "Time+" to adjust the time needed. When display shows the time needed, press "Function / Cancel" button to choose the function needed. Press "Time+" or "Time-" button to set the cooking time. Appliance starts to count down preset time, and work later.

Precaution:

1. Check that the power supply voltage corresponds to that shown on the appliance. Power supply should be earth connected.
2. Do not place the appliance near the hot source or in a hot oven, as serious damage could result.
3. Never leave the appliance in operation unattached. Keep away from children.
4. Do not use the appliance if the appliance or the cord is damaged, or the appliance shows visible damage or does not work properly.
5. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard. The new power cord must be specially qualified.
6. Burns can occur by touching the hot surface of the appliance, the hot water, the steam or the food.
7. Never immerse the appliance in water!
8. Do not move the appliance when it is full of liquid or hot foods.
9. Do not touch the appliance when it is cooking.
10. Always unplug the appliance immediately after use, when moving it or prior to any cleaning or maintenance.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance

12. This appliance cannot be operated by an individual timer or remote set
13. Add in water or unplug the appliance when it dry-burns. Do not touch the heating element.
14. The appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses.


Cleaning and maintenance:

1. Empty the water tank and clean it with a damp cloth. Any hard tool or metal scourer is not allowed.
2. Do unplug the appliance after use.
3. Never immerse the appliance in water or rinse it under tap.
4. Packed well and stored in ventilating place if the appliance will not be used for a long time.
5. Ceramic containers are fragile. Please take carefully.
6. Never immerse the appliance in water or rinse it under tap!


Troubleshooting and Treatment:

1. If the power cord or power plug is abnormally hot
2. If the electricity flows discontinuously when the power cord is bent
3. If the appliance is abnormal hot or if you smell smoke or scorching
4. If you get shocked when touching the appliance
5. If the appliance sometimes does not turn off automatically
6. If water is leaking out from the appliance

各部件名稱

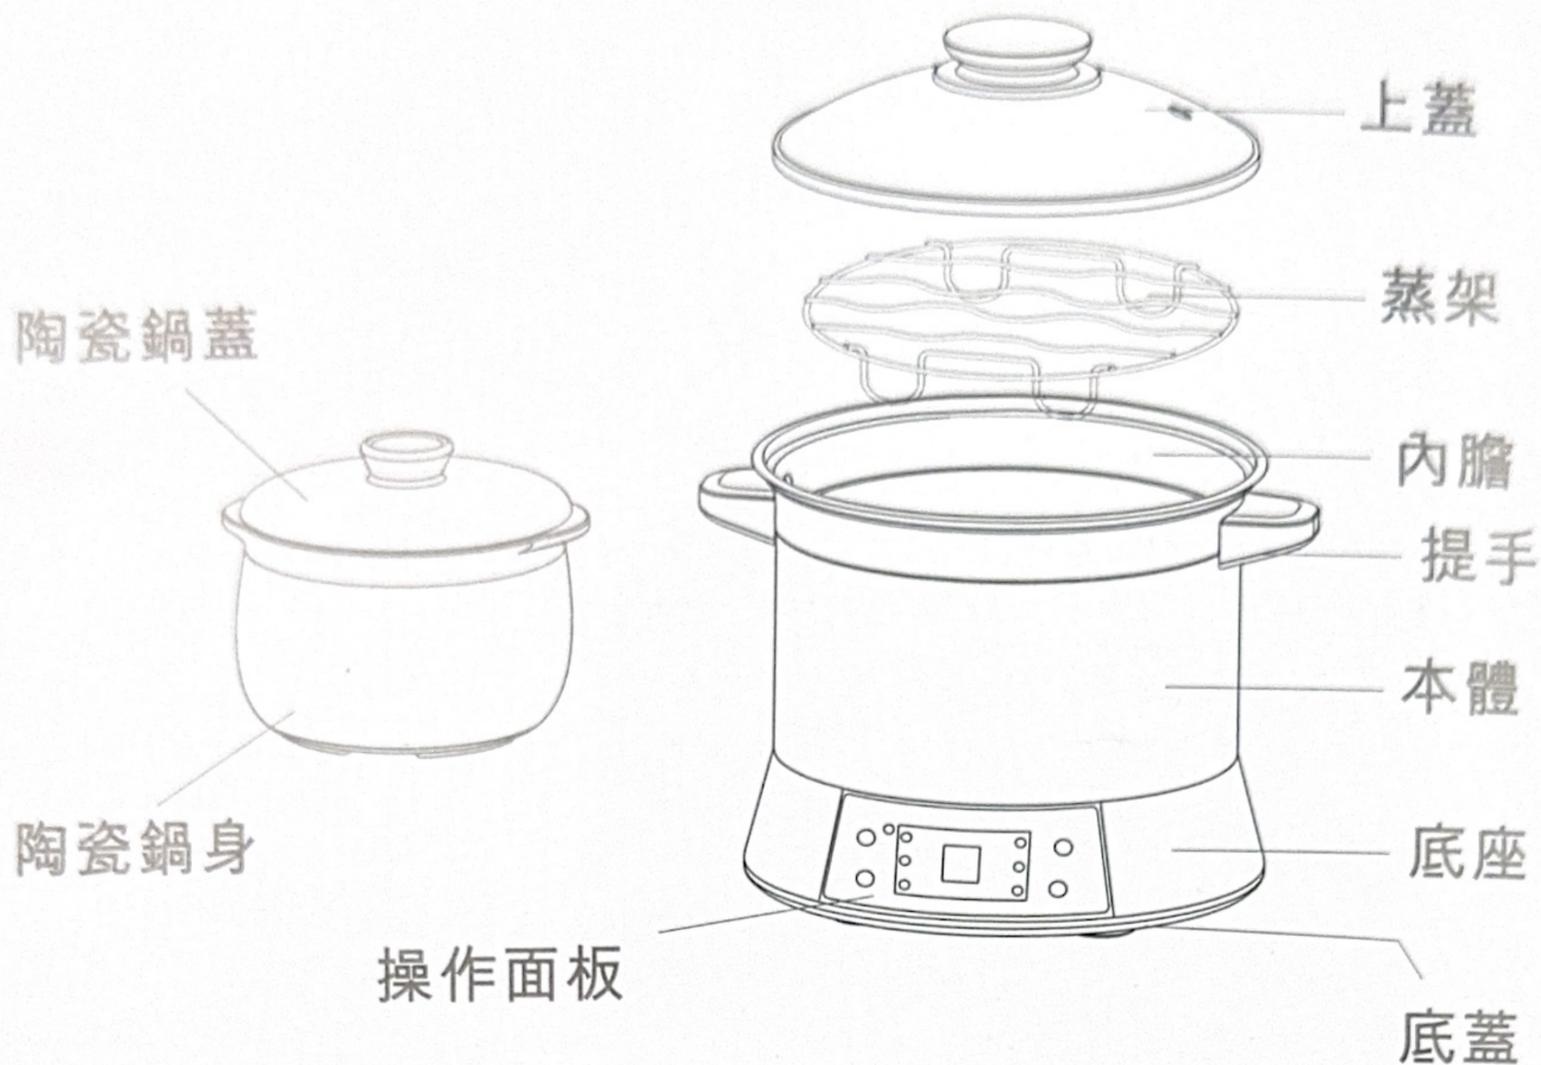

操作面板

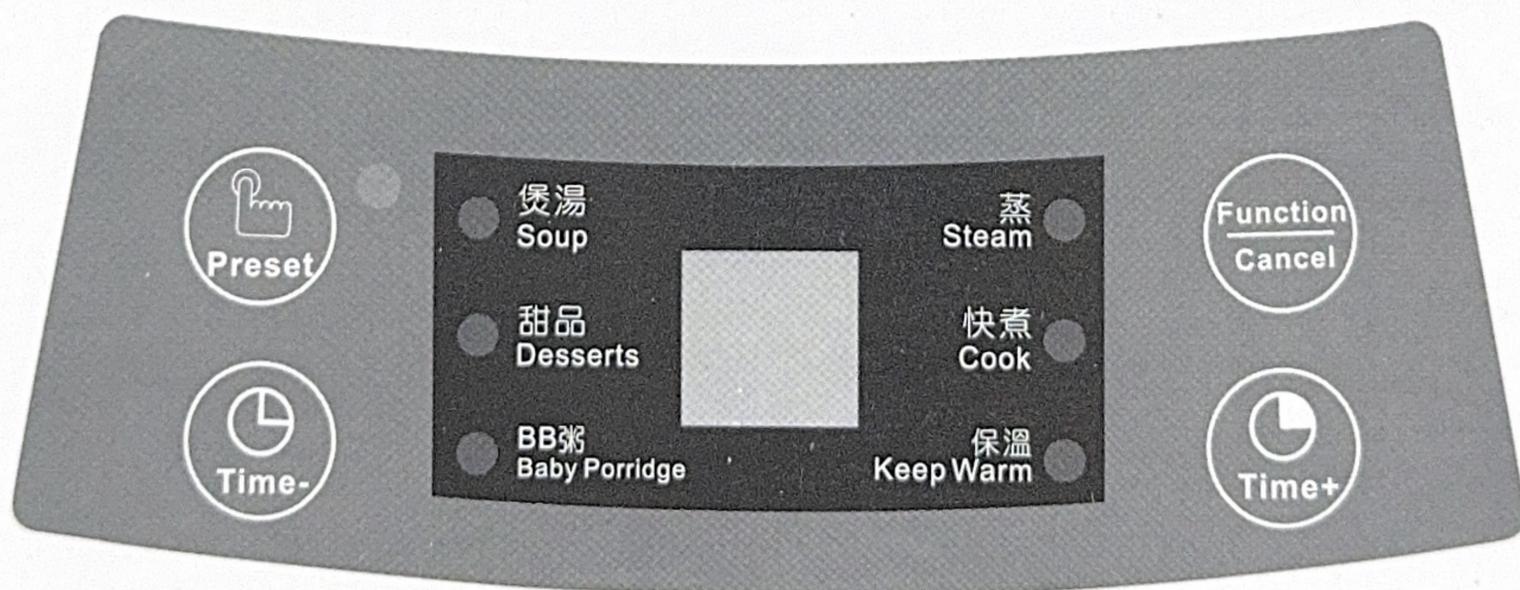


產品規格

型號	WDZ-12G
額定電壓頻率	120V~60Hz
消耗功率	300W
容量	1.2L


使用方法

1. 燉煮

- 1.1 在陶瓷鍋內放入需燉煮的各類食材，並加入適量的水（需覆蓋食物為宜），再蓋上陶瓷鍋蓋。

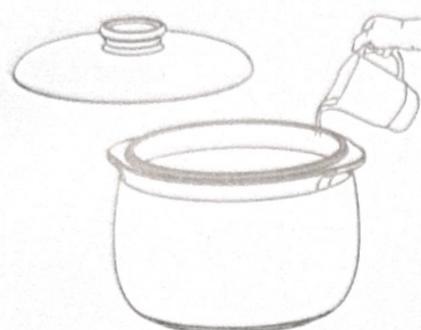

- 1.2 把裝好食物的陶瓷鍋放入機體內，再往機體內加入適量的水（加水至機體所示最高水位線為佳），然後蓋上上蓋。

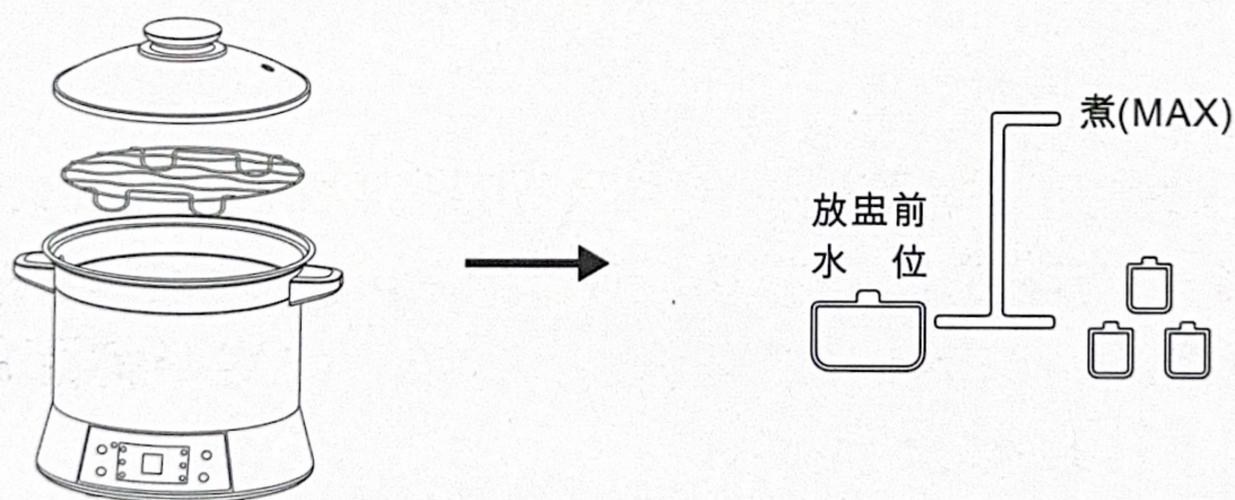

2. 蒸

先往機體內加入適量的水，水的高度不可超過機體內蒸架的高度，以免水沸騰後觸碰到食物，再把蒸架和食物放入機體內並蓋上上蓋。

3. 功能選擇

- 3.1 接通電源，無功能指示燈亮起，時間顯示 0:00
- 3.2 按下“Function/ Cancel” 按鈕，所選功能相應閃爍，顯示幕顯示時間。按下“Time+”, “Time-”來調整你所需要的時間，待10秒鐘後，自動進入工作狀態。
- 3.3 待警示音“didi...”響約1分鐘後完成工作，自動切換到“保溫”，顯示幕顯示“EE”
- 3.4 在“保溫”狀態下，如果水燒乾，警示音“didi...”響約40秒後，所有指示燈滅，顯示幕顯示“EO”
- 3.5 待冷卻後，回復到待機狀態，顯示幕顯示“OF”

4. 預約

按下“Preset” 按鈕，再按下“Time+”調整所需要的烹煮時間，當顯示幕顯示所需要的時間後，按下“Function/ Cancel” 按鈕，選擇所需要的功能。按下“Time+”或“Time-” 按鈕，設定預約烹飪時間，待10秒後，進入預約倒數計時。

清潔與保養

1. 清洗時，請勿使用硬質刷或鋼絲球，以免損壞表面。
2. 使用完後，請拔掉電源插座上插頭。
3. 請勿將本產品浸入水中或直接用水沖洗。
4. 產品長時間不使用時，請清潔擦乾，裝入包裝箱中或放置於通風處乾燥的地方收藏。
5. 使用或移動陶瓷時，請輕拿輕放。

簡易故障排除

如出現以下的異常情況或故障，應立即停止使用本產品，並將本產品送往服務中心進行檢查及維修。

1. 電源線或電源插頭異常發熱。
2. 稍微彎曲電源線，產品出現斷續斷電的情況。
3. 產品異常發熱或發出燒焦的味道。
4. 當接觸產品的外殼，有感覺到觸電情況。
5. 有部份時間無法自行斷電。
6. 產品出現漏水情況。